


## B: AT VEHICLES

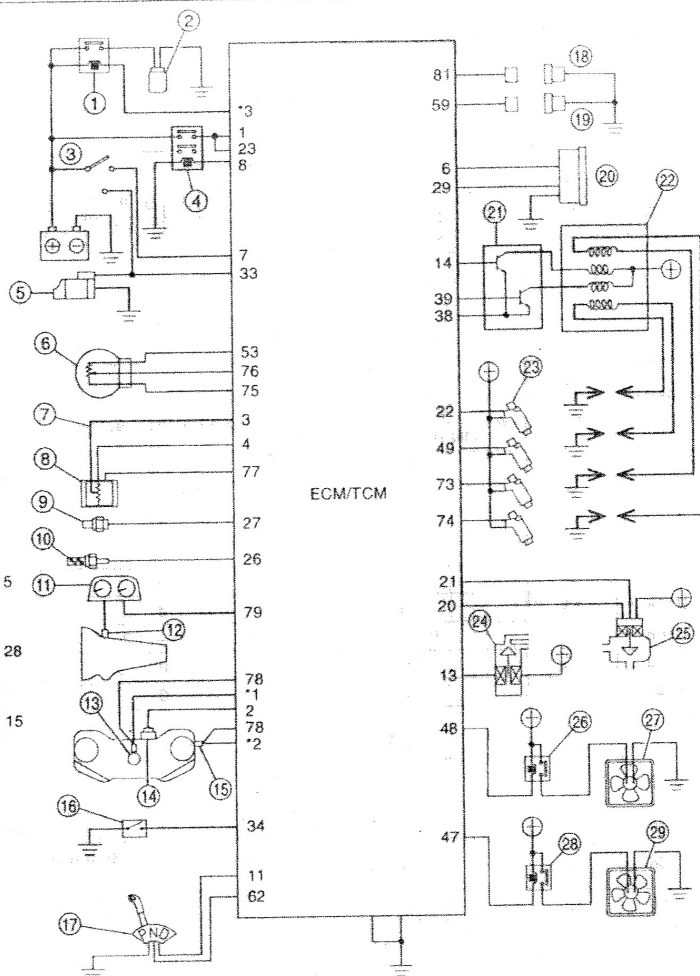

- \*1 :  
With immobiliser : 28  
Without immobiliser : 5
- \*2 :  
With immobiliser : 5  
Without immobiliser : 28
- \*3 :  
With immobiliser : 16  
Without immobiliser : 15

- ① Fuel pump relay
- ② Fuel pump
- ③ Ignition switch
- ④ Main relay
- ⑤ Starter
- ⑥ Throttle position sensor
- ⑦ CO resistor signal
- ⑧ Mass air flow sensor
- ⑨ Engine coolant temperature sensor
- ⑩ Oxygen sensor

- ⑪ Combination meter
- ⑫ Vehicle speed sensor 2
- ⑬ Crankshaft position sensor
- ⑭ Knock sensor
- ⑮ Camshaft position sensor
- ⑯ A/C switch
- ⑰ Park/Neutral position (inhibitor) switch
- ⑱ Read memory connector
- ⑲ Test mode connector

- ⑳ Data link connector
- ㉑ Ignitor
- ㉒ Ignition coil
- ㉓ Fuel injector
- ㉔ Purge control solenoid valve
- ㉕ Idle air control solenoid valve
- ㉖ Radiator main fan relay
- ㉗ Radiator main fan
- ㉘ Radiator sub fan relay
- ㉙ Radiator sub fan

B2M1386A